

Kit parafango anteriore in carbonio - 96903610A**Carbon front mudguard kit - 96903610A****Simbologia**

Per una lettura rapida e razionale sono stati impiegati simboli che evidenziano situazioni di massima attenzione, consigli pratici o semplici informazioni. Prestare molta attenzione al significato dei simboli, in quanto la loro funzione è quella di non dovere ripetere concetti tecnici o avvertenze di sicurezza. Sono da considerare, quindi, dei veri e propri "promemoria". Consultare questa pagina ogni volta che sorgessero dubbi sul loro significato.

**Attenzione**

La non osservanza delle istruzioni riportate può creare una situazione di pericolo e causare gravi lesioni personali e anche la morte.

**Importante**

Indica la possibilità di arrecare danno al veicolo e/o ai suoi componenti se le istruzioni riportate non vengono eseguite.

**Note**

Fornisce utili informazioni sull'operazione in corso.

Riferimenti

I particolari evidenziati in grigio e riferimento numerico (Es. ①) rappresentano l'accessorio da installare e gli eventuali componenti di montaggio forniti a kit.

I particolari con riferimento alfabetico (Es. (A)) rappresentano i componenti originali presenti sul motoveicolo.

Tutte le indicazioni destro o sinistro si riferiscono al senso di marcia del motociclo.

Avvertenze generali**Attenzione**

Le operazioni riportate nelle pagine seguenti devono essere eseguite da un tecnico specializzato o da un'officina autorizzata Ducati.

**Attenzione**

Le operazioni riportate nelle pagine seguenti se non eseguite a regola d'arte possono pregiudicare la sicurezza del pilota.

**Note**

La documentazione necessaria per eseguire il montaggio del Kit è il Manuale Officina relativo al modello di moto in vostro possesso.

**Note**

Nel caso fosse necessaria la sostituzione di un componente del kit consultare la tavola ricambi allegata.

Symbols

The symbols used in this manual are aimed at making reading direct and easy. The symbols are used either to draw the reader's attention on potentially hazardous conditions, or to give practical advice or to supply general information. Pay the utmost attention to these symbols as they are used to remind of technical principles or safety measures which will not be repeated extensively. They must therefore be considered as "reminders". Check with this page in case of doubt about their meaning.

**Warning**

Failure to comply with these instructions may put you at risk and lead to severe injury or death.

**Important**

It indicates the possibility of damaging the motorcycle and/or its components if the instructions are not followed.

**Notes**

It supplies useful information about the operation in progress.

References

The parts highlighted in grey and with a reference number (e.g. ①) represent the accessory to be installed and any assembly components supplied with the kit.

The parts with alphabetic reference (e.g. (A)) represent the original components present on the motorcycle.

All left and right indications are referred to the motorcycle direction of travel (forward riding position).

General notes**Warning**

The operations listed in the following pages must be carried out by a specialised technician or by a Ducati authorised service centre.

**Warning**

Carefully perform the operations on the following pages since they might negatively affect rider safety.

**Notes**


The Workshop Manual of your motorcycle model is the documentation required to assemble the Kit.

**Notes**

Should it be necessary to change any kit parts, please refer to the attached spare part table.

**Warning**

Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

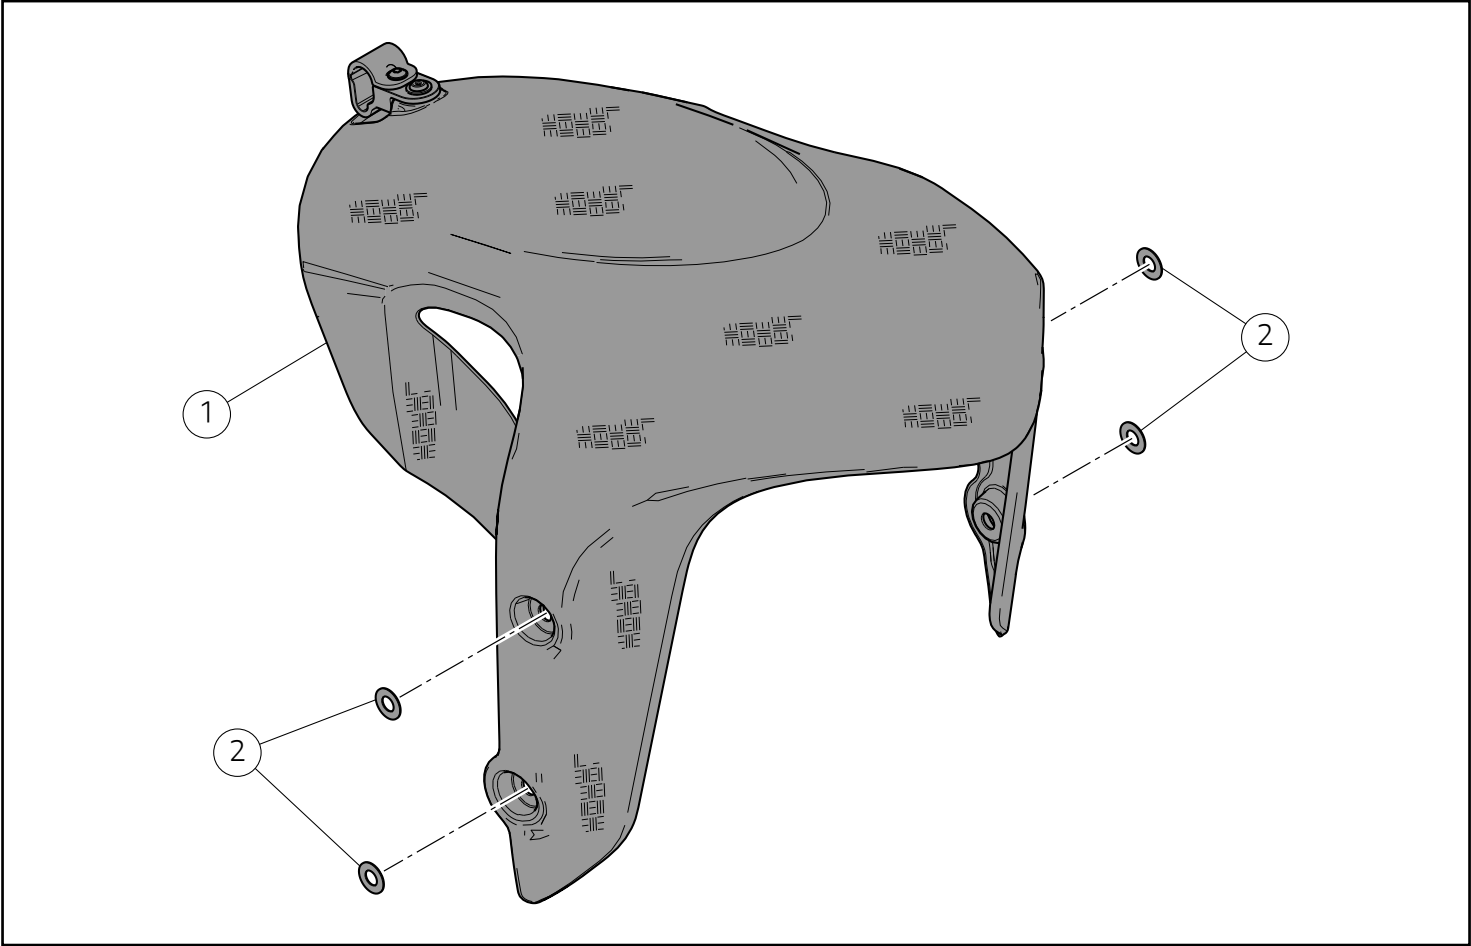

Importante


I componenti del kit possono essere soggetti ad aggiornamenti; consultare il DCS (Dealer Communication System) per avere informazioni sempre aggiornate.



Important

The parts of the kit can be updated; for information always up to date, please refer to DCS (Dealer Communication System).

Pos.	Denominazione	Name
1	Parafango anteriore	Front mudguard
2	Rosetta in Nylon	Nylon washer

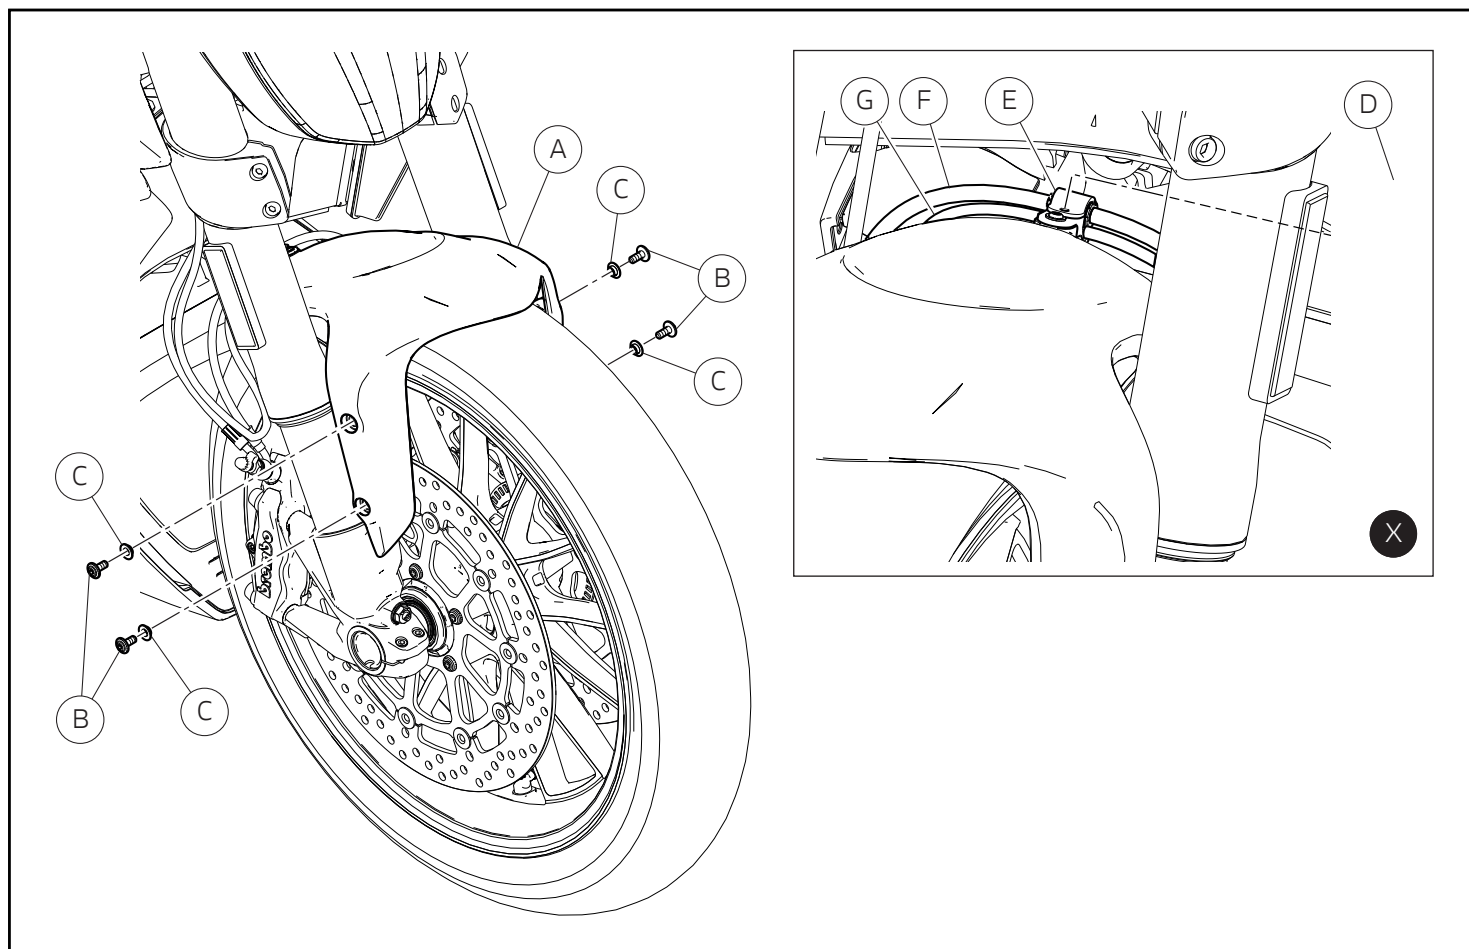

Smontaggio componenti originali


Smontaggio parafrangente anteriore

Svitare le n.4 viti originali (B) che fissano il parafrangente (A). Rimuovere i residui di frenafili dalle n.4 viti originali (B), che verranno riutilizzate. Rimuovere le rosette originali (C). Prima di rimuovere il parafrangente (A), svitare la vite (D) ed aprire la fascetta (E) per liberare il tubo freno anteriore (F) e il cavo sensore velocità anteriore (G), come mostrato nel riquadro (X). Rimuovere il parafrangente originale (A).

Removing the original components

Front mudguard disassembly

Loosen no. 4 original screws (B) that fix the mudguard (A). Remove threadlocker residues from the no.4 original screws (B) that will be reused. Remove the original washers (C). Before removing the mudguard (A), loosen the screw (D) and open the clamp (E) to release the front brake hose (F) and the front speed sensor cable (G), as shown in box (X). Remove the original mudguard (A).

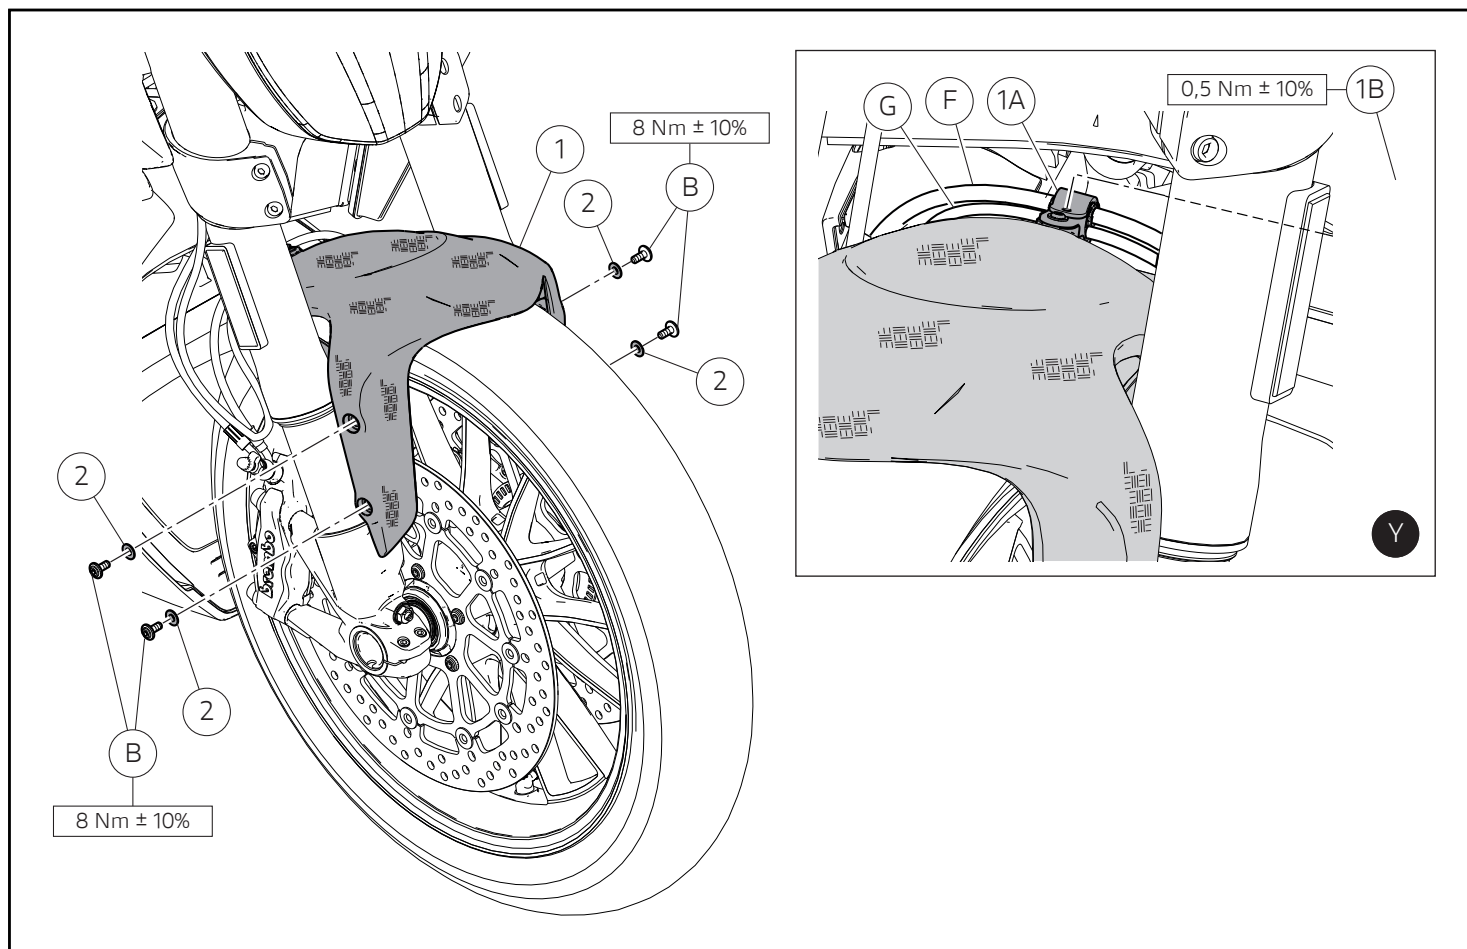

Montaggio componenti kit



Importante

Verificare, prima del montaggio, che tutti i componenti risultino puliti e in perfetto stato. Adottare tutte le precauzioni necessarie per evitare di danneggiare qualsiasi parte nella quale ci si trova ad operare.



Attenzione

Durante il montaggio di componenti in carbonio porre particolare attenzione al serraggio delle viti di fissaggio. Serrare gli elementi di fissaggio senza forzare eccessivamente per evitare che il carbonio si danneggi.

Montaggio parafrangente anteriore

Installare il parafrangente in carbonio (1) tra gli steli forcella. Inserire le rosette speciali (2) sulle viti originali (B). Applicare un sottile strato di LOCTITE 243 sul filetto delle n.4 viti originali (B) ed impuntarle nelle sedi degli steli forcella, come mostrato in figura. Serrare le n. 4 viti (B) alla coppia indicata.

Svitare la vite (1B) ed aprire la fascetta (1A). Introdurre nella fascetta (1A) il tubo freno anteriore (F) e il cavo sensore velocità anteriore (G), come mostrato nel riquadro (Y). Richiudere la fascetta ed impuntare la vite (1B). Serrare la vite alla coppia indicata.

Assembling the kit components



Important

Before assembling, check that all parts are clean and in good conditions. Adopt all necessary precautions to avoid damaging any part you are working on.



Warning

When fitting carbon components, pay special attention to fastening screw tightening. Tighten the fastening elements without forcing excessively to avoid carbon damage.

Front mudguard assembly

Install the carbon mudguard (1) between the fork legs. Place the special washers (2) on the original screws (B). Apply a thin layer of LOCTITE 243 to the thread of the 4 original screws (B) and start them into the fork leg seats, as shown in the figure. Tighten no. 4 screws (B) to the specified torque.

Loosen the screw (1B) and open the clamp (1A). Insert the front brake hose (F) and the front speed sensor cable (G) into the clamp (1A), as shown in the box (Y). Close the clamp and start the screw (1B). Tighten screw to the specified torque.